

Can I place Sustainer driver in the middle position?

No. Sustainer driver requires a minimum distance of 2 inches from bridge pickup, this is due to magnetic properties of the system. If you want to use a different neck pickup sound, you can place your neck pickup of choice right next to the Sustainer driver and wire it directly into pickup selector switch or neck volume pot, discarding green 'neck pickup output' wire from circuit board.